

ALUMINIUM

4-WHEELED ROLLATOR

Instruction Manual

Usage and Maintenance Instructions





N.B. This equipment must be installed by a competent person.

Do not exceed the weight limit stated - doing so could put the user at risk.

BEFORE USE

- Carefully remove all packaging. Avoid using any knives or other sharp instruments as this may damage the surface of the product.
- Check the product for any visible damage. If you see any damage or suspect a fault, do not use your product, but contact your supplier for support.

INTENDED USE

Your Rollator has been designed to assist you when walking and carrying small items of shopping using the bag provided. The bag was designed specifically to fit your rollator, please only use the bag supplied for your Rollator. Do not use or combine bags and/ or baskets from other manufacturers.

When not in use, you can simply fold the Tonia Rollator and store away until you require it next. The Tonia range of rollators are designed to be used both inside and outside the home.

 
ASSEMBLY INSTRUCTIONS

Carefully remove all packaging, including the cardboard tubes covering the knurled tube part of the brake assembly. Check the product thoroughly for damage or obvious faults.



If you suspect the unit to faulty, please do not use, but contact your supplier immediately for service.


COMPONENTS OF THE ROLLATOR





1. Push handle
2. Brake lever
3. Front wheel folding mechanism knobs
4. Backrest
5. Mesh seat
6. Shopping bag
7. Rear wheel folding mechanism knobs
8. Front wheel
9. Rear wheel

ASSEMBLY PROCEDURE

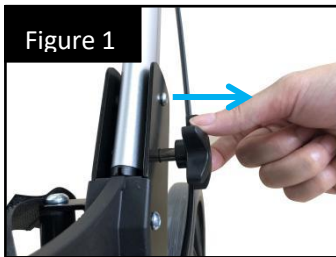

PART 1 UNFOLD YOUR ROLLATOR

1. Undo hook & loop, remove rear wheel folding mechanism knob. (Figure 1)



2. Rotate the rear wheel arms backward. (Figure 2)

3. Insert and tighten rear wheel folding mechanism knobs firmly, ensuring proper alignment.

4. Remove front wheel folding mechanism knobs. (Figure 3)

Figure 3

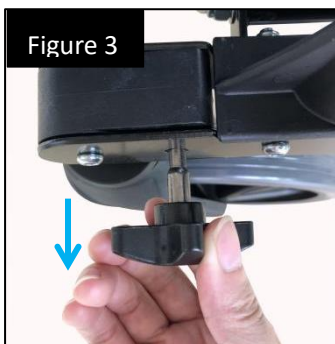


Figure 4

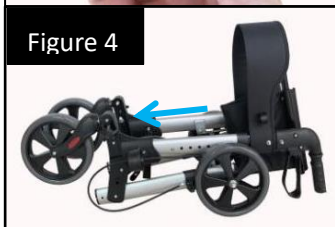


Figure 5



7. Pull the two push handles apart.
8. Open the frame until the crossbar locking mechanism locked automatically, verify seat is locked in place by pushing down



CAUTION- Make sure the crossbar locking mechanism and rear wheel folding mechanism knobs locked firmly before use.

ASSEMBLY PROCEDURE



PART 2 FOLDING

Remove the accessories and lower down the handle if necessary. Lift up the crossbar locking mechanism release belt on the mesh seat to release the crossbar lock. Fold the frame as shown on left (Figure 6). Push the two push handles together. Release the front and rear wheel folding mechanism knobs and rotate the rear wheel arms inward, replace folding mechanism knobs



PART 3

Adjusting the height level of the handles to fit different users. Press the buttons for handgrips and pull the handgrip upwards or downwards. As the handle moves, release



PART 4

Attach the bag to the hook of the seat frame. The shopping bag can be detached easily when needed. (Figure 8)

OPERATING THE BRAKES

Figure 9



1. To stop, gently apply a gripping pressure to both brakes simultaneously (figure 9), this will slow down and stop your Rollator.


2. The brakes on your Rollator have a park option (figure 10). To operate the park option, push downwards on both brakes simultaneously. You will feel the brake make a very slight click. Your brakes are now in the 'lock' position.

Figure 10



BRAKE ADJUSTMENT

Figure 11

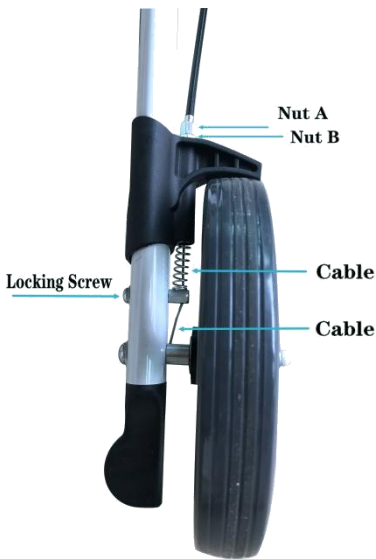

Your Rollator brake system will require periodic adjustment. To adjust the brakes loosen Nut B and then screw/unscrew Nut A. When adjusted re-tighten Nut B. If further adjustment is required then loosen the Locking Screw and then using a pair of pliers pull the cable down by approximately a millimetre. Re-tighten Locking Screw. The brakes can then be adjusted further by loosening Nut B and screwing/unscrewing Nut A as before

(Figure 11)

REISSUE

If you reissue or are about to reissue this product, please thoroughly check all components for their safety.

This includes:

- Bent or damaged tubes or cracks at the tube joints.
- Loose or worn horseshoe clips

- Elongated adjustment holes.
- Loose handles.
- Loose or worn Wheels and wheel fasteners (where fitted)
- Smooth, worn or split ferrules (rubber tips).

Replace all worn, missing or damaged parts where necessary. If in any doubt, please do not issue or use, but immediately contact your supplier for service support.

CARE AND MAINTENANCE & YOUR OBLIGATION

1. Only use your Rollator for the purpose for which it intended, which is as an aid to walking. It is intended your rollator is only used on standard pavements or at home. It should not be used on rough terrain or pot-holed surfaces. The use of your rollator on these surfaces can seriously compromise your safety and may damage your rollator beyond repair.
2. Keep your Rollator clean by wiping down with a damp cloth with a mild detergent. Do not under any circumstances use an abrasive or solvent based cleaner, as this will seriously damage the rollator and void your warranty.
3. Wipe off all surfaces with a dry cloth and use a water dispersing agent such as WD40 on all metal joints.
4. Check that all wheels and the folding mechanism function correctly

and that all wheels move freely. Pay particular attention to the front wheels, ensuring that they rotate freely and without obstruction and that they are attached securely to the frame.



Withdraw your Rollator immediately if any of the wheels become difficult to turn or do not feel securely attached to the frame or if you suspect damage or any other fault.

5. Monthly Checks - check that all locking pins are properly secure . Check that no components are loose. Check the adjustment to your brakes. Check castors.
6. Do not fit any parts or accessories to your Tonia Rollator manufactured by another company. To do so will annul your warranty and may seriously compromise your safety.
7. We suggest that you check your Tonia Rollator visually every day. However we recommend that you should have your rollator serviced every three months or less if used by, or issued to, various users.

CLEANING

Clean your Rollator using a non-abrasive cleaner or mild detergent with a soft cloth. Abrasive cleaners e.g. AJAX and/ or abrasive cleaning pads may seriously damage the product beyond repair and should not be used. Always ensure that you wipe dry the equipment after cleaning.

MAINTENANCE

Please make a safety check of the product at regular intervals or if you have any Concerns.